

MADRIX

LIGHTING CONTROL

NEBULA



Quick Start Guide & Technical Manual

MADRIX® NEBULA – Quick Start Guide & Technical Manual

4th Edition — April 2019

Thank you for purchasing MADRIX® NEBULA!

Please read this guide carefully and thoroughly before using MADRIX® NEBULA. Make sure that you fully understand all information.

This MADRIX® NEBULA Quick Start Guide is written in English and German.
(Diese Kurzanleitung wurde in englischer und deutscher Sprache verfasst.)

Developed and made in Germany.

Imprint

inoage GmbH
Wiener Straße 56
01219 Dresden
Germany

Managing Directors: Christian Hertel, Sebastian Pinzer, Sebastian Wissmann

Web www.madrix.com
E-mail info@madrix.com
Phone +49 351 862 6869 0

Copyright Information And Disclaimer

© 2019 inoage GmbH. All rights reserved. Information is subject to change at any time and without prior notice. Errors and omissions excepted. Reproduction, adaptation, or translation without prior written permission is prohibited. inoage GmbH does not grant guarantee on validity for a particular reason, the marketability, or other properties of the product. There is no way to assert a claim to inoage GmbH, neither in the legal way nor in other ways. inoage GmbH is not responsible for damages, including all disadvantages that are not just limited to the loss of sales, but that are caused due to the use of the product, due to the loss of serviceability of the product, due to misuse, happenings, circumstances, or actions that inoage GmbH does not have influence on, no matter if the damages as well as consequential damages are direct or indirect; whether they are special damages or others, nor if the damage is caused by the owner of the warranty or a third person.

Trademark Credits

Microsoft® and Windows® are U.S. registered trademarks of Microsoft Corporation. Art-Net™ – Designed by and Copyright Artistic Licence Holdings Ltd. All other products mentioned herein may be trademarks of their respective companies. MADRIX® is a registered trademark of inoage GmbH.

Package Contents

- 1x MADRIX® NEBULA
- 1x Set of screw terminals (2x 4-pin and 1x 2-pin)
- 1x USB 2.0 cable (*certified*)
- 2x Wall-mount brackets
- 1x This quick start guide / technical manual

Please note: Check the package contents and the condition of the interface after unpacking! Contact your supplier if something is missing or damaged. Do not use the device if it seems to be damaged!

Safety Instructions And Limited Warranty

Two years of limited manufacturer's warranty are granted to the purchaser of this product. Warranty applies to constructional fault, material defect, or incorrect assembly the manufacturer has caused or is to be held responsible for. Warranty will be void if the interface is opened, modified, damaged through inappropriate handling and wrong usage, damaged through overvoltage, or damaged through any other cause.

Please follow the instructions below to avoid mishandling, damage to the device, or personal injury:



**THE DEVICE WORKS WITH LOW VOLTAGE (DC 5 V – 24 V).
DO NOT USE ANY OTHER VOLTAGE!**



Beware that the interface works with electrical power. Only use the device in dry environments (indoor use). The IP Rating of the device is IP20. Do not use the interface in humid environments and avoid contact with water or any other liquids. Turn off the power if you are not using the device for a long time.

Avoid unwanted voltage on the cables at all times. Do not remove any parts from the unit or connect to an ungrounded circuit. Do not connect the unit to LEDs that are switched on. Only connect the unit to LEDs and controllers that are initially powered off.

There are no user-reparable parts inside or outside the interface. Repair service lies only within the responsibilities of the manufacturer. If the interface appears to be defective, please contact your dealer. After expiration of the warranty period, you may contact your supplier or the manufacturer to have the unit repaired against payment of an individual service fee if possible.

The interface has several ports and slots. Only connect or insert devices, cables, and connectors to the individual ports and slots using connectors of the same type as the port. Do not use inapplicable equipment. This device should be used by professionals. The device is not designed to be operated by non-professionals or children.

End-Of-Life



This electrical device and its accessories need to be disposed of properly. Do not throw the device into normal trash or household waste. Please recycle packaging material whenever possible.

Usage

In general, this device is designed to receive control data over Ethernet (Art-Net / Streaming ACN) or USB and convert the data into supported SPI protocols. It is a hardware interface to be connected towards various types of controllable, digital LEDs. Do not use the interface for any other, deviating purpose. The device can be connected to and disconnected from USB or Ethernet network during use and without a reboot (Hot Swapping & Plug and Play). Multiple interfaces can be used at the same time.

Technical Specifications

Power supply:	DC 5 V – 24 V, A) via 2-pin screw terminal (12 A max.), B) via 5 V USB, C) via Port 1 or 2 sourced from LEDs; 6 A max. load per port when supplying through to LEDs
<i>(See pages 6 – 12)</i>	
Power consumption:	< 1.5 W during normal operation (300 mA max.)
Data output:	8x 512 channels SPI TTL (Maximum output per port: 680 RGB LEDs / 512 RGBW LEDs / 2048 1-channel LEDs)
Ports:	2x ports (via 2x 4-pin, pluggable screw terminals)
Ethernet:	2x RJ45, Auto MDI-X, 10/100 MBit/s (compatible with 1 GBit/s)
USB port:	USB 2.0, type B plug
Case:	Non-conductive, IP20, UL94 V-0 flammability rating, designed for 35 mm DIN-rails or wall mounting
Dimensions:	92 mm x 70 mm x 45 mm (length x width x height)
Weight:	110 g 132 g incl. screw terminals and wall mounts
Temperature range:	-10 °C to 70 °C (Operating) -20 °C to 85 °C (Storage)
Relative humidity:	5 % to 80 %, non-condensing (Operating / Storage)
Supported LEDs:	APA101, APA102, APA104, APA106, GS8207, GW6201, GW6205, LPD1882S, LPD6803, LPD8806, MBI6120, P9883, SJ1221, SK6812, SK6822, SM16703, SM16716, TLS3001, TLS3008, TM1804, TM1809, TM1812, TM1814, TM1829, UCS1903, UCS2903, UCS512B3, UCS8904, UCS9812S, WS2801, WS2803, WS2811, WS2811S, WS2812, WS2812B, WS2813, WS2815, WS2818, WS2822S, WS2822S Addressing
<i>(As of March 2019 – See www.madrix.com for the latest information)</i>	

IP Address And Other Device Information

You will find the following important information on the side of the device:

- Serial number ('Serial')
- Hardware revision ('Model')
- Default and preconfigured IP address ('Default IP')
(See page 14 to reset the device to the default IP address if needed.)

Using A 3rd-Party Controller

MADRIX® NEBULA is a standard network node for Art-Net or Streaming ACN. You can use the device with any compatible application, console, or controller.

Using The MADRIX® Software

The MADRIX® Software is a professional and advanced LED lighting control tool. It is recommended to use it in order to access all features of MADRIX® NEBULA, including the USB connection, Art-Net, Streaming ACN, and Sync Mode.

Please note: In order to distribute data via MADRIX® NEBULA using the MADRIX® Software, a MADRIX® Software license is required (sold separately)!

MADRIX® Minimum System Requirements And MADRIX® Supported Operating Systems

For the latest information, please check the website www.madrix.com


The minimum system requirements for the MADRIX® Software are as follows. Optimal system specifications will often be higher.

- 2.0 GHz dual-core CPU, OpenGL 2.1 graphics card (NVIDIA recommended), 2 GB RAM, 1 GB free harddisk space, 1280 x 768 screen resolution, network card, sound card, USB 2.0

The MADRIX® 5 Software supports the following operating systems:

- Microsoft® Windows® 7 | 8 | 8.1 | 10
64 bit only
Please keep the system, drivers, and updates up to date.

Connectivity

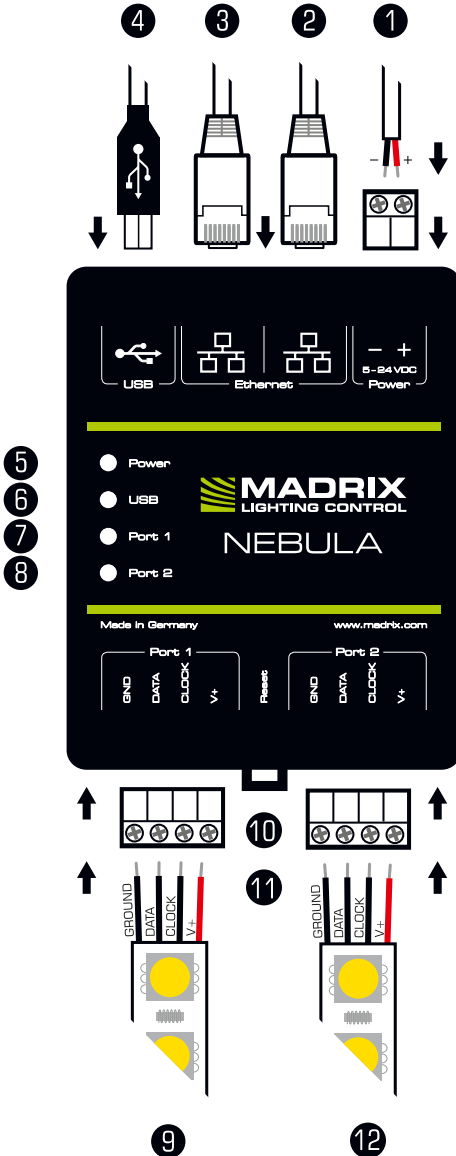


- 1) Power
- 2) Right Ethernet port, incl. 2 status LEDs
- 3) Left Ethernet port, incl. 2 status LEDs
- 4) USB port
- 5) Status LED for Power
- 6) Status LED for USB
- 7) Status LED for Port 1
- 8) Status LED for Port 2
- 9) Port 1
- 10) Reset button
- 11) DIN-rail unlocking clip
- 12) Port 2

Please note:

The package contents do not include network cables, power cables, or LEDs.

2x Mounting brackets:

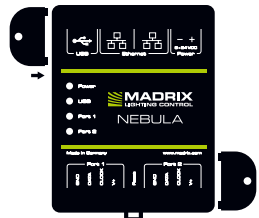

1) Connecting Your LEDs

See chapter 'Connection Diagram Variations' on page 8 for all possible variations.

Step 1) Completely switch off your supply of power before connecting your LEDs to the device!

Step 2) Connect your LEDs to the provided 4-pin screw terminals:

- » The max. recommended wire length between NEBULA and LEDs or between LEDs depends on the protocol, signal frequency, cables, and cable shielding.
- » You may connect only to Port 1, only to Port 2, or to Port 1 and Port 2.
- » Pay attention where to connect GROUND, DATA, CLOCK, and V+; as indicated on the LEDs and the device as well as required by the diagram.
- » You may connect 4-pin LEDs as well as 3-pin LEDs without CLOCK.
- » Insert each individual wire consecutively and tighten the corresponding screw with a suitable screw driver.

Step 3) Plug the 4-pin screw terminals into the device. The screws must face upwards.

Step 4) Supply your LEDs with power (per port or jointly) as per their manual.

Step 5) Continue with the chapter '2) Connecting To Power And Data' below.

2) Connecting To Power And Data

See chapter 'Connection Diagram Variations' on page 8 for all possible variations.

Step 1) Be careful when handling the device and electrical power! Completely switch off your supply of power before connecting to the device!

Step 2) Connect your power cables to the provided 2-pin screw terminal:

- » Pay attention where to connect + and -; as indicated on the device.
- » Insert each individual wire consecutively and tighten the corresponding screw with a suitable screw driver.

Step 3) Plug the 2-pin screw terminal into the device. The screws must face upwards.

Step 4) Connect to USB or to Ethernet network for data as required.

Step 5) Do not switch on your supply of power until all required power cables and LEDs are connected to MADRIX® NEBULA.

Step 6) Continue by selecting the required output protocol as described in chapter '3) Device Configuration' on page 13.

Connection Diagram Variations

You can connect your LEDs, MADRIX® NEBULA, and data cables in different ways. The following pages show the different variations as connection diagrams. These schemes are to be seen independently of the direction, position, and mounting method. Variation A1 to Variation D refer to the data connection over network. Variation X1 to Variation Z refer to the data connection over USB. Please see page 6 and page 7 for further information.



SUPPLY POWER TO NEBULA ONLY ONCE! DO NOT CONNECT V+ MULTIPLE TIMES BY CONNECTING IT VIA PORT 1/2 AND POWER.

Legend



Connection required for GROUND / DATA.



Connection possible for CLOCK if needed.



Connection required for V+.




Represents single LEDs or multiple LED strips / LED strips / LED tape up to the maximum possible amount per port.

Power Supply


Represents as many power supplies as needed for the amount of your LEDs. May represent a joint power supply for several LED tapes or may represent several, separate power supplies for several LED tapes and ports. Please mind the correct supply of power for your LEDs and their correct direction as per their user manual!


How To Connect Multiple LEDs

When your power supply provides power for multiple LED stripes, for example:




When your power supply only provides power for 1 LED stripe, for example:

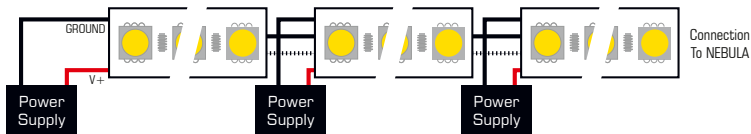

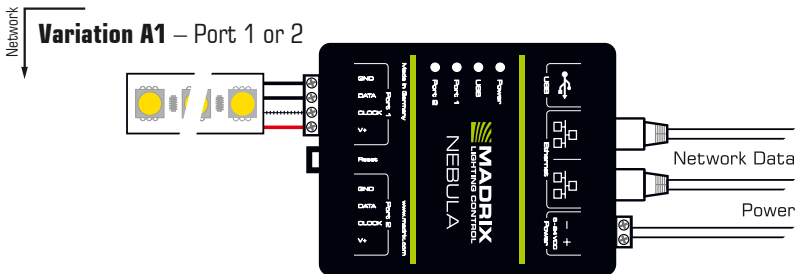


Description: Power is supplied only once. It is supplied to NEBULA with 12 A max. and routed through to the LEDs, which are connected only to Port 1 or only to Port 2 via GROUND, DATA, possibly CLOCK, and V+ with 6 A max. load for the port.

Variation B1 – Port 1 or 2

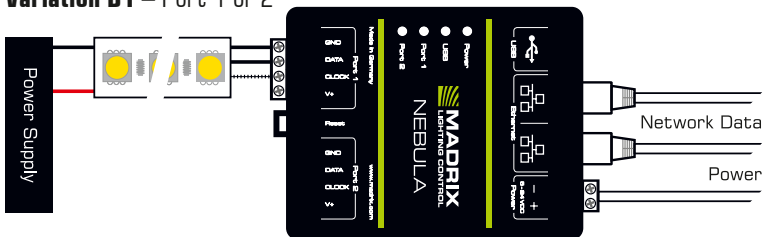

Description: Power is supplied to NEBULA and supplied separately to the LEDs (as required). The LEDs are connected only to Port 1 or only to Port 2 via GROUND, DATA, and possibly CLOCK, but not via V+!


Variation C1 – Port 1 or 2

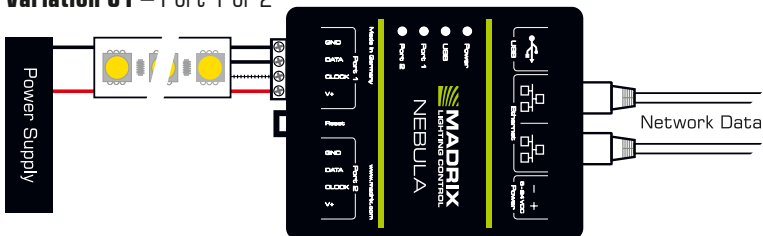

Description: Power is supplied only once. It is supplied to the LEDs (as required). The LEDs are connected only to Port 1 or only to Port 2 via GROUND, DATA, possibly CLOCK, and V+. This variation is suitable for LEDs that use > 9 V, due to the expected voltage drop over the length.


Alternative: Position the power supply between LEDs and NEBULA for LEDs with 5 V power supply.

Variation A2

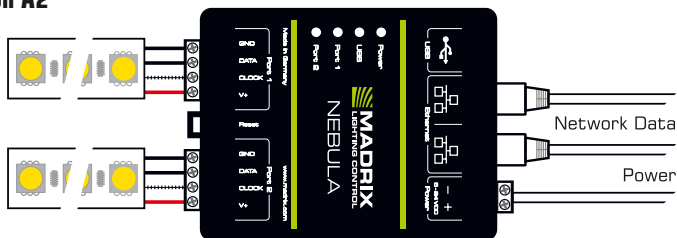


Description: Power is supplied only once. It is supplied to NEBULA with 12 A max. and routed through to all LEDs, which are connected to Port 1 and to Port 2 via GROUND, DATA, possibly CLOCK, and V+ with 6 A max. load for each port.

Variation B2

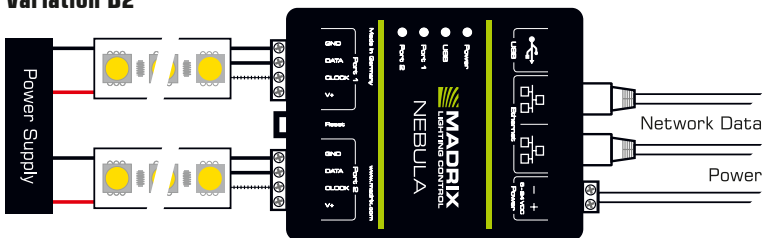

Description: Power is supplied to NEBULA and supplied separately to the LEDs (as required). LEDs are connected to both ports via GROUND, DATA, and possibly CLOCK, but not via V+!


Variation C2

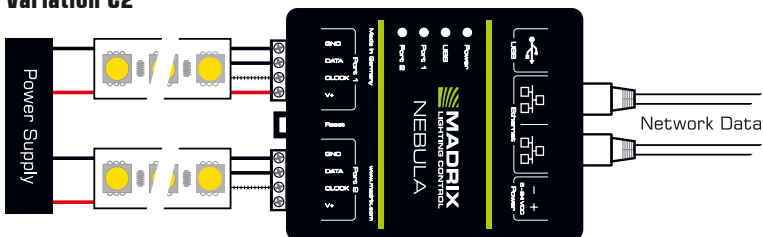

Description: Power is supplied to both LEDs (as required). LEDs are connected to both ports via GROUND, DATA, possibly CLOCK, but only once via V+! This variation is suitable for LEDs that use > 9 V, due to the expected voltage drop over the length.

Alternative: Position the power supply between LEDs and NEBULA for LEDs with 5 V power supply.


Variation D

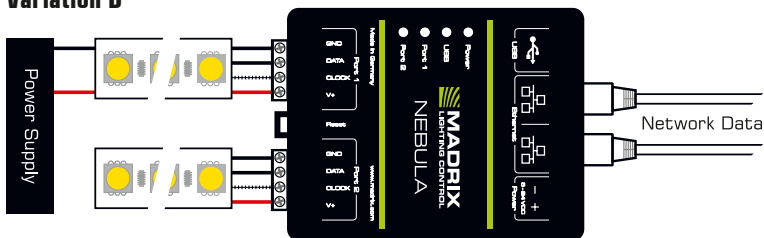

Description: Power is supplied only once and it is only supplied to the first LEDs (as required)! LEDs are connected to both ports via GROUND, DATA, possibly CLOCK, and V+ (6 A max.). This variation is recommended for LEDs that use > 9 V, due to the expected voltage drop.


Alternative: Position the power supply between LEDs and NEBULA for LEDs with 5 V power supply.

Variation X1 – Port 1 or 2

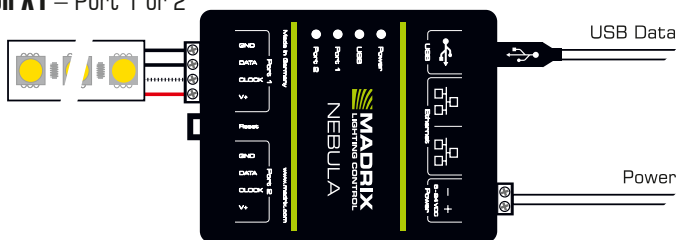


Description: Power is supplied only once. It is supplied to NEBULA with 12 A max. and routed through to the LEDs, which are connected only to Port 1 or only to Port 2 via GROUND, DATA, possibly CLOCK, and V+ with 6 A max. load for the port.

Variation Y1 – Port 1 or 2

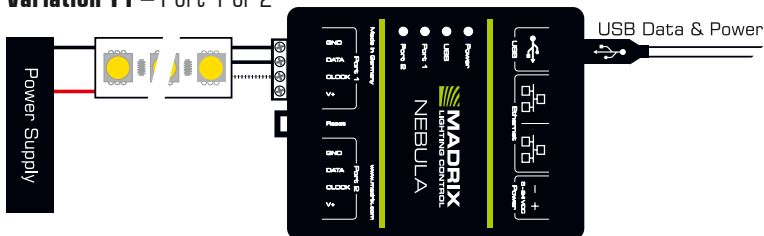


Description: Power is supplied to NEBULA over USB and supplied separately to the LEDs (as required). The LEDs are connected only to Port 1 or only to Port 2 via GROUND, DATA, and possibly CLOCK, but not via V+!

Variation X2

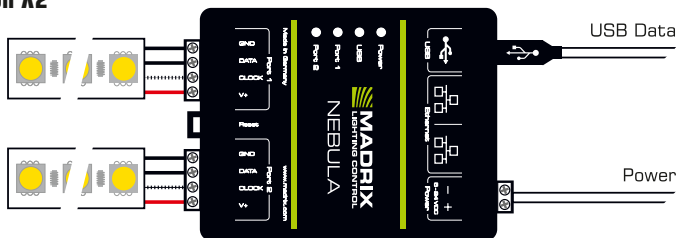


Description: Power is supplied only once. It is supplied to NEBULA with 12 A max. and routed through to all LEDs, which are connected to both ports via GROUND, DATA, possibly CLOCK, and V+ with 6 A max. load for each port.

Variation Y2

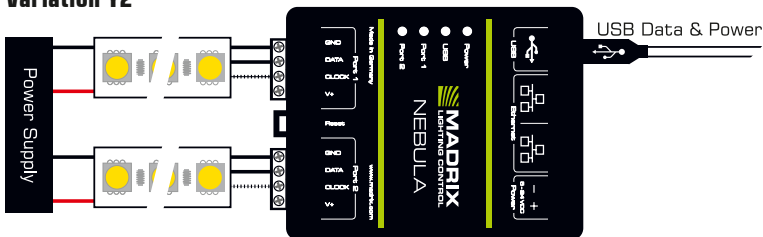

Description: Power is supplied to NEBULA over USB and supplied separately to the LEDs (as required). LEDs are connected to both ports via GROUND, DATA, and possibly CLOCK, but not via V+!

Variation Z

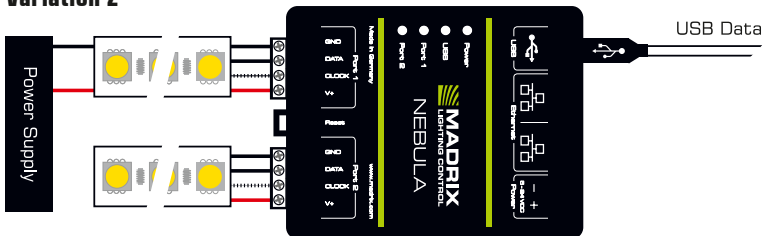

Description: Power is supplied only once and it is only supplied to the first LEDs (as required)! LEDs are connected to both ports via GROUND, DATA, possibly CLOCK, and V+ (6 A max.). This variation is recommended for LEDs that use > 9 V, due to the expected voltage drop.

Alternative: Position the power supply between LEDs and NEBULA for LEDs with 5 V power supply.

3) Device Configuration

- Step 1) Connect MADRIX® NEBULA and your computer to the same network.
- Step 2) Assign correct network settings in the Windows operating system. (Recommended: IP address 10.0.0.1 / Subnet mask 255.0.0.0)
- Step 3) Open your web browser and enter the IP address of MADRIX® NEBULA. (You can find the default IP address on the side of the NEBULA device.)
- Step 4) The built-in web configuration tool will be launched. Go to 'Port Output Settings' → 'Output Protocol' and choose the LEDs you are using for 'Port 1' and 'Port 2'. You can choose the output protocol separately for each of the two ports. Apply changes with 'Set'.
- Step 5) Change any other settings as required. Apply changes with 'Set'.

Please note: In order to put MADRIX® NEBULA fully into operation, please set the correct output protocol according to the LEDs you have connected.

Daisy-Chain Support

NEBULA features 2 separate Ethernet network ports. Either one is fully functionally for IN and OUT and can be used for the data connection without using a separate network switch or router.

We recommend to connect a maximum of 40 units after one another in a row, when using Art-Net in Unicast Mode or Streaming ACN Multicast at a max. data rate of 50 FPS / 20 ms without any additional devices in the network. In the MADRIX® Software, we highly recommend to activate ArtSync for excellent image quality (see page 17).

How To Update The Firmware

It is highly recommended to update the firmware should a new firmware version become available. You can update the device in different ways, for example:

- Step 1) Connect MADRIX® NEBULA to your computer over USB.
- Step 2) Start the MADRIX® Software.
- Step 3) In MADRIX®, go to 'Tools...' → 'MADRIX Device Configuration...'. A new window will open. Click on the search button (loupe icon) and the software will search for connected devices. Select your device in the list, click on the 'Firmware' button, and follow any instructions.

Description Of Status LED Codes

STATUS	STATUS LED POWER
Powered off	Power not connected. → The device has no power.
Permanently green	Connected to power. → The power is on.
Blinking green	Bootloader activated. → Reset device / upload firmware.

STATUS	STATUS LED USB
Powered off	USB not connected.
Red + blinking green	Communicating over USB. → Sending or receiving data over USB. The USB port works.
Fading between red + green	Connected to USB; Drivers installed correctly. → No data is sent over USB.
Orange	Connected to USB; No drivers installed. → Reinstall software and drivers or try a different USB port.

STATUS	STATUS LED PORT 1	STATUS LED PORT 2
Powered off	No data is sent.	No data is sent.
Blinking green	Sending data to Port 1. → The output port works.	Sending data to Port 2. → The output port works.

STATUS	STATUS LEDS ETHERNET PORTS
Green off	10 MBit/s connected.
Green on	100 MBit/s connected.
Orange on	Network connected.
Orange blinking	Sending or receiving data. → The Ethernet port works.


Reset To Factory Default Settings

In rare cases, you might need to do a reset to factory default settings:

- Step 1) Disconnect all connections from the device (power, data, LEDs).
- Step 2) Use a suitable tool to press the reset button (between Port 1 and 2).
- Step 3) Continue to press the reset button and supply power again over 'Power' or USB.
- Step 4) Continue to press the reset button and wait until all status LEDs of the device flash repeatedly or wait 10 seconds.

Please note: Simply repeat these steps should the process fail.

How To Install On DIN-Rails

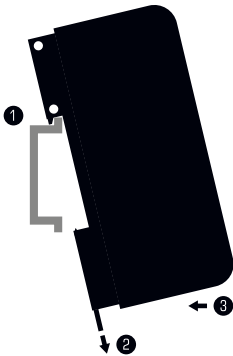


Mounting (Pictured Left)

- Step 1) Hook the device in an angle onto the upper edge of the rail.
- Step 2) Pull the unlocking clip.
- Step 3) Press the lower part of the device against the rail and let the clip snap into position.

Unmounting (Pictured Right)

- Step 1) Pull the unlocking clip.
- Step 2) Lift the lower part of the device from the rail in an angle.
- Step 3) Lift the device from the rail.

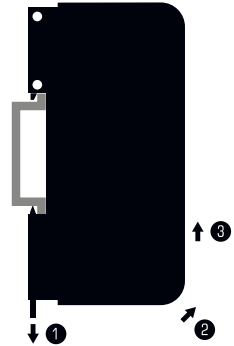

Using The MADRIX® Software

You can mainly use 3 operating modes together with the MADRIX® Software:

- Output Via Art-Net
- Output Via Streaming ACN
- Output Via USB

First, make sure to activate the correct drivers in the MADRIX® Software:

- For USB, go to 'Preferences' > 'Options...' > 'Devices USB',
- For sACN, go to 'Preferences' > 'Options...' > 'Devices Network',
- For Art-Net, go to 'Preferences' > 'Device Manager...' > 'Art-Net'.

Second, configure and activate your devices in order to send data:

- Go to 'Preferences' > 'Device Manager...' > 'DMX Devices'.

For more information, please read the MADRIX® 5 user manual.

Updates And Further Information

Digital documentation files are automatically installed with MADRIX®. More information about the software and how to connect MADRIX® NEBULA is provided in the **MADRIX® Help And Manual**. You can access this user manual by pressing 'F1' on your keyboard while using the MADRIX® Software, by navigating to the menu 'Help' → 'User Manual...', or online at help.madrix.com


The latest quick start guide and MADRIX® Software, including drivers, firmware updates, and documentation, are available from www.madrix.com

Support

In case of further questions concerning handling of MADRIX® NEBULA or technical problems, please read the MADRIX® Help And Manual first, contact your dealer, or have a look at the website www.madrix.com


You can also directly contact info@madrix.com

CE And RoHS Declaration Of Conformity

 **RoHS**
compliant

The device complies with the requirements set forth in the council Directive of the law of the Member States relating to electromagnetic compatibility (2014/30/EU), the Low Voltage Directive (2014/35/EU), and the Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment (2011/65/EU) (RoHS). Compliance with these has been evaluated in acc. with the following standards: DIN EN 55011 (2009) + A1 (2010), DIN EN 55015 (2013), DIN EN 55024 (2010), DIN EN 61000-4-2 (2009), DIN EN 61000-4-3 (2006) + A1 (2008), DIN EN 61000-4-4 (2013), DIN EN 61000-4-6 (2014).

FCC Declaration Of Conformity

 The device has passed the following tests of compliance:
FCC (2003) - Title 47, Part 15, class A, Radio frequency devices.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Frequently Asked Questions (FAQs)

What do the blinking LEDs on the device mean?

Please read the chapter 'Description Of Status LED Codes' (see p. 14).

How can I change the IP address?

You can use the built-in web configuration tool (see p. 13).

The current IP address cannot be reached. What can I do?

You could perform a reset to factory default settings (see p. 14).

Does the device support RDM?

No. RDM is not supported by MADRIX® NEBULA at this time.

Is it possible to use more than one MADRIX® NEBULA?

Yes. Art-Net or Streaming ACN are recommended for large projects by connecting multiple devices to a switch (1 GBit/s) via suitable components to create a network or use the built-in daisy-chain support (see p. 13).

Where do I activate the ArtSync sync mode?

In the MADRIX® Software, it can be activated under 'Preferences...' → 'Device Manager...' → tab 'Art-Net' → 'ArtSync'.

Where can I find the latest firmware update?

The latest MADRIX® Software also includes the latest firmware (see p. 13).

Can I use other controllers apart from MADRIX® to control LEDs?

Yes. When using MADRIX® NEBULA as a standard network node, you can use it in combination with other software applications, consoles, and controllers.

Do I need a MADRIX® NEBULA and a MADRIX® KEY?

If you want to use the MADRIX® Software, yes. The MADRIX® Software license is necessary and sold separately.

Can I repair MADRIX® NEBULA myself?

No. Do not attempt any repairs. Any attempt will void your warranty (see p. 3)!

What can I do if my unit does not work anymore?

Please contact your dealer or supplier if the device seems to be defective.

MADRIX® NEBULA – Kurzanleitung & Technisches Handbuch

4. Edition — April 2019

Deutsch

Vielen Dank, dass Sie sich für das MADRIX® NEBULA entschieden haben!

Bitte lesen Sie sich diese Kurzanleitung aufmerksam und sorgfältig vor der Erstbenutzung durch. Vergewissern Sie sich, dass Sie alle Informationen verstanden haben.

Diese Kurzanleitung wurde in englischer und deutscher Sprache verfasst.
(This MADRIX® NEBULA Quick Start Guide is written in English and German.)

Entwickelt und hergestellt in Deutschland.

Impressum

inoage GmbH
Wiener Straße 56
01219 Dresden
Deutschland

Geschäftsführer: Christian Hertel, Sebastian Pinzer, Sebastian Wissmann
Amtsgericht Dresden, HR B 29795
WEEE-Reg.-Nr. DE 26695213
USt-IdNr. DE276174128

Internet: www.madrix.com
E-Mail: info@madrix.com
Telefon: +49 351 862 6869 0

Urheberrecht und Haftungsausschluss

© 2019 inoage GmbH. Alle Rechte vorbehalten. Änderungen und Irrtümer vorbehalten. Reproduktion, Adaption oder Übersetzungen sind ohne vorherige, schriftliche Erlaubnis nicht gestattet. Dieses Handbuch wurde mit größter Sorgfalt verfasst. inoage GmbH gibt jedoch keine Gewähr hinsichtlich Richtigkeit, Marktfähigkeit oder Eigenschaften des Produkts. Es gibt keinen rechtlichen oder anderen Weg, Anspruch gegenüber inoage GmbH zu erheben. inoage GmbH schließt jede Haftung für Schäden, Nachteile sowie Folgeschäden aus, die durch Umsatzausfall sowie durch die Benutzung des Produktes, durch den Verlust der Betriebsfähigkeit des Produktes, durch unsachgemäße Benutzung, Ereignisse, Umstände oder Handlungen, auf die inoage GmbH keinen Einfluss hat, ganz gleich, ob es sich um direkte oder indirekte Schäden, Folgeschäden oder spezielle Schäden handelt und ob diese vom Besitzer oder einer dritten Person verursacht wurden.

Eingetragene Marken

Microsoft®, Windows® sind eingetragene Marken der Microsoft Corporation. Art-Net™ : Entwicklung und Copyright Artistic Licence Holdings Ltd. Alle anderen genannten Produkte können eingetragene Marken der jeweiligen Firmen sein. MADRIX® ist eine eingetragene Marke der inoage GmbH.

Lieferumfang

- 1x MADRIX® NEBULA
- 1x Set an Schraubklemmen (2x 4-polig und 1x 2-polig)
- 1x USB 2.0-Kabel (*zertifiziert*)
- 2x Wandhalterungen zur Wandmontage
- 1x Diese Kurzanleitung / Technisches Handbuch

Hinweis: Überprüfen Sie den Verpackungsinhalt und das Gerät nach dem Auspacken. Kontaktieren Sie bitte Ihren Händler, sollte der Inhalt unvollständig oder beschädigt sein. Verwenden Sie das Produkt nicht bei Beschädigung!

Sicherheitshinweise und Garantie

Der Käufer dieses Produktes erhält zwei Jahre Herstellergarantie auf das Produkt hinsichtlich Konstruktions- und Designfehler, Materialfehler oder fehlerhafte Montage, soweit diese durch den Hersteller verursacht wurden oder er diese zu verantworten hat. Die Garantie erlischt, sobald das Gerät geöffnet, verändert, modifiziert oder durch unsachgemäße Handhabung, durch Überspannung oder durch anderweitige Ursachen beschädigt wurde.

Bitte beachten Sie die nachstehenden Hinweise, um falsche Handhabung, gesundheitliche Schäden und Geräteschäden zu vermeiden:



DAS GERÄT ARBEITET MIT KLEINSPANNUNG (5 V – 24 V GLEICHSTROM). NUTZEN SIE NUR DIESE SPANNUNG!



Betreiben Sie das Gerät nur in trockener Umgebung (Gebrauch in geschlossenen Räumen). Die Schutzklasse des Gerätes ist IP20. Vermeiden Sie hohe Luftfeuchtigkeit und Kontakt mit Wasser und jeglichen anderen Flüssigkeiten. Trennen Sie das Gerät bei längerer Nichtbenutzung von der Spannungsversorgung.

Entfernen Sie keine Teile vom Gerät oder andere Bauteile und verbinden Sie es niemals mit einem ungeerdeten Stromkreis. Schließen Sie das Gerät nicht an eingeschaltete LEDs an. Verbinden Sie nur LEDs, welche zunächst ausgeschaltet sind.

Es gibt keine vom Benutzer zu wartenden Teile innerhalb des Gerätes. Eventuelle Reparaturarbeiten obliegen dem Hersteller. Wenden Sie sich bei Defekt bitte an Ihren Händler. Nach Ablauf der Garantie können kostenpflichtige Reparaturen beim Händler bzw. Hersteller angefragt werden.

Verbinden Sie nur Geräte, Kabel, Anschlüsse, o.Ä., die dem Typ des jeweiligen Anschlusses am Gerät entsprechen. Verbinden und benutzen Sie keine Geräte mit falschen Anschlüssen.

Das Gerät sollte vom Fachmann installiert werden. Es ist für den professionellen Gebrauch vorgesehen und nicht für Kinder bestimmt.

Altgeräte und Entsorgung



Das Gerät, sein Zubehör sowie Verpackungsmaterial müssen ordnungsgemäß entsorgt werden. Geben Sie nichts in den Hausmüll. inoage GmbH ist beim bundesweiten Rücknahmesystem für Elektronische Geräte (EAR) registriert (WEEE-Reg.-Nr. DE 26695213).

Benutzung

Das Gerät empfängt Steuerdaten über Netzwerk (Art-Net / Streaming ACN) oder über USB und wandelt diese in unterstützte SPI-Datenprotokolle für LEDs / Chips um. Es wird an verschiedene, steuerbare Leuchtprodukte angeschlossen. Verwenden Sie das Gerät nur zu seinem vorgesehenen Zweck. Das Gerät kann während der Benutzung und ohne Neustarten des PCs von USB oder Netzwerk getrennt und daran angeschlossen werden (sog. Hot Swapping und Plug & Play). Mehrere Geräte können zur selben Zeit betrieben werden.

Technische Daten

Stromversorgung:	5 V – 24 V Gleichstrom, über A) 2-polige Schraubklemme (max. 12 A), B) 5 V USB oder C) Port 1 oder 2; max. 6 A Last je Anschluss bei gleichzeitiger Speisung d. LEDs
<i>(Siehe Seiten 6 – 12)</i>	
Stromaufnahme:	< 1,5 W im Normalbetrieb (max. 300 mA)
Datenausgabe:	8x 512 Kanäle "SPI" (max. Ausgabe pro Anschluss: 680 RGB-LEDs / 512 RGBW-LEDs / 2048 1-Kanal-LEDs)
Anschlüsse:	2x Anchl. (über 2x 4-polige, steckbare Schraubklemmen)
Netzwerk:	2x RJ45, Auto MDI-X, 10/100 MBit/s (mit 1 GBit/s kompatibel)
USB-Anschluss:	USB 2.0, Stecker vom Typ B
Gehäuse:	Nicht leitend, Schutzklasse IP20, Brennbarkeit nach UL94 V-0, für 35-mm Hutschienen oder Wandmontage
Abmaße:	92 mm x 70 mm x 45 mm (Länge x Breite x Höhe)
Gewicht:	110 g 132 g inkl. Schraubklemmen und Wandhalterung
Temperaturbereich:	-10 °C bis 70 °C (Betrieb) -20 °C bis 85 °C (Lagerung)
Relative Luftfeuchte:	5 % bis 80 %, nicht kondensierend (Betrieb / Lagerung)
Datenprotokolle:	APA101, APA102, APA104, APA106, GS8207, GW6201, GW6205, LPD1882S, LPD6803, LPD8806, MB16120, P9883, SJ1221, SK6812, SK6822, SM16703, SM16716, TLS3001, TLS3008, TM1804, TM1809, TM1812, TM1814, TM1829, UCS1903, UCS2903, UCS512B3, UCS8904, UCS9812S, WS2801, WS2803, WS2811, WS2811S, WS2812, WS2812B, WS2813, WS2815, WS2818, WS2822S, WS2822S Addressing
<i>(Stand März 2019 –</i>	
<i>Neueste Informationen auf</i>	
<i>www.madrix.com)</i>	

IP-Adresse und andere wichtige Informationen

Sie finden folgende, wichtige Informationen auf der Seite des Gerätes:

- Seriennummer ("Serial")
- Hardwareversion ("Model")
- Vorkonfiguration und Standardeinstellung der IP-Adresse ("Default IP")
(Seite 14 beschreibt das Zurücksetzen des Gerätes, falls benötigt.)

Nutzung von anderen Zuspielern

MADRIX® NEBULA ist ein standardisiertes Gerät für Art-Net und Streaming ACN. Es kann mit sämtlichen kompatiblen Netzwerkuspielern betrieben werden.

Nutzung der MADRIX®-Software

Für den Zugang zu allen Gerätefunktionen (inkl. der USB-Verbindung, Art-Net, Streaming ACN und Synchronisationsmodus) wird MADRIX® empfohlen.

Hinweis: Zur Ausgabe von Daten über das MADRIX® NEBULA wird eine Softwarelizenz für MADRIX® benötigt (separat erhältlich)!

Min. Systemanforderungen für MADRIX® und unterstützte Betriebssysteme


Die aktuellsten Informationen stehen zur Verfügung auf www.madrix.com
Die MADRIX®-Software setzt die folgenden Anforderungen mindestens voraus.
Die optimalen Systemspezifikation sind oftmals höher.

- Zweikern-Prozessor mit 2,0 GHz, Grafikkarte mit OpenGL 2.1 (NVIDIA wird empfohlen), 2 GB RAM, 1 GB freier Festplattenspeicherplatz, Monitorauflösung von 1280 x 768, Netzwerkkarte, Soundkarte, USB 2.0

Die MADRIX®-5-Software unterstützt die folgenden Betriebssysteme:


- Microsoft® Windows® 7 | 8 | 8.1 | 10
Nur für 64-Bit
System, Treiber und Updates bitte aktuell halten.

Anschlussmöglichkeiten

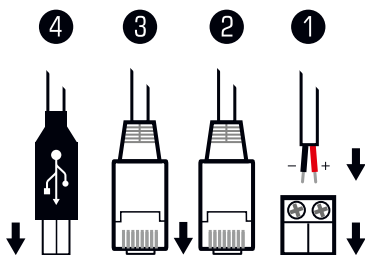


- 1) Spannungsversorgung
- 2) Netzwerkanschluss rechts, inkl. 2 Status-LEDs
- 3) Netzwerkanschluss links, inkl. 2 Status-LEDs
- 4) USB-Anschluss
- 5) Status-LED für Strom
- 6) Status-LED für USB
- 7) Status-LED für Anschluss 1
- 8) Status-LED für Anschluss 2
- 9) Anschluss 1 (Port 1)
- 10) "Reset"-Taste
- 11) Hutschienen-Entriegelung
- 12) Anschluss 2 (Port 2)


- 5
- 6
- 7
- 8

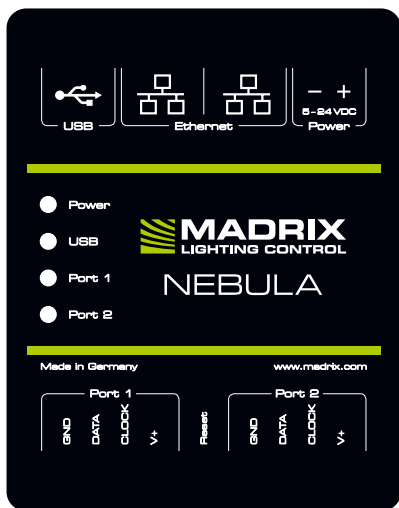

Hinweis: Netzwerkabel, Stromkabel oder LEDs sind nicht im Paket enthalten.

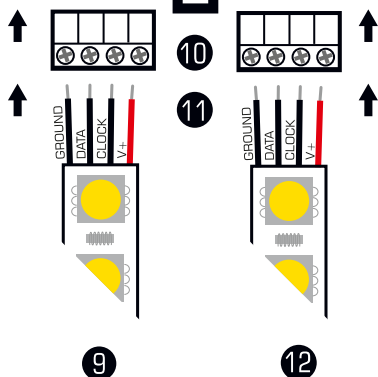

2x Wandhalterungen:

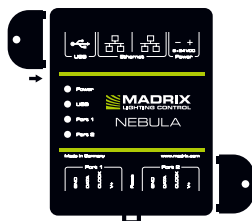

1. Anschluss der LEDs

Alle möglichen Varianten finden Sie im Kapitel "Anschlussvarianten" ab Seite 8.

Schritt 1) Schalten Sie die Spannungsversorgung zunächst komplett aus!

Schritt 2) Anschluss der LEDs an die mitgelieferten 4-poligen Schraubklemmen:

- » Die max. empfohlene Länge zw. Gerät und LEDs sowie zw. LEDs hängt insb. von Protokoll, Signalfrequenz, verwendetem Kabel und Kabelschirmung ab.
- » Es kann Anschluss 1 oder 2 bzw. Anschluss 1 und 2 genutzt werden.
- » GROUND (MASSE), DATA (DATEN), CLOCK (TAKT) und V+ müssen, wie auf LEDs, dem Gerät und laut Diagramm dargestellt, verbunden werden.
- » Es können auch 3-polige LEDs ohne CLOCK (TAKT) angeschlossen werden.
- » Bitte jeden Draht einzeln und nacheinander verbinden und die entsprechende Schraube mit einem passenden Schraubendreher festziehen.

Schritt 3) Die 4-poligen Schraubklemmen in das Gerät einstecken.

Die Schrauben der Klemme müssen dabei nach oben zeigen.

Schritt 4) Die LEDs pro Anschluss getrennt oder zusammen mit Spannung versorgen, wie in deren Handbuch beschrieben.

Schritt 5) Weiter m. Kapitel "2. Anschluss Spannungsversorgung und Daten".

2. Anschluss Spannungsversorgung und Daten

Alle möglichen Varianten finden Sie im Kapitel "Anschlussvarianten" ab Seite 8.

Schritt 1) Vorsicht beim Umgang mit Spannung! Schalten Sie die Spannungsversorgung zunächst komplett aus!

Schritt 2) Anschluss des Stromkabels an die 2-polige Schraubklemme:

- » + und – müssen, wie auf dem Gerät dargestellt, verbunden werden.
- » Bitte jeden Draht einzeln und nacheinander verbinden und die entsprechende Schraube mit einem passenden Schraubendreher festziehen.

Schritt 3) Die 2-polige Schraubklemme in das Gerät einstecken. Die Schrauben der Klemme müssen dabei nach oben zeigen.

Schritt 4) Datenverbindung wie benötigt über USB oder Netzwerk herstellen.

Schritt 5) Die Spannungsversorgung erst herstellen, wenn alle Stromkabel und LEDs an das MADRIX® NEBULA angeschlossen wurden.

Schritt 6) Bitte das richtige Ausgabeprotokoll einstellen, wie in Kapitel "3. Geräte-Konfiguration" auf Seite 13 beschrieben.

Anschlussvarianten

Ihre LEDs, NEBULA und die Datenkabel können auf verschiedene Arten verbunden werden. Auf den folgenden Seiten sind die verschiedenen Varianten als Verbindungsdiagramme dargestellt. Diese sind unabhängig von der Ausrichtung, Platzierung oder Art der Montage. Varianten A1 bis D beziehen sich auf die Datenverbindung über Netzwerk. Varianten X1 bis Z beziehen sich auf die Verbindung über USB. Weitere Informationen finden Sie auf Seite 6 und 7.



STELLEN SIE DIE SPANNUNGSVERSORGUNG FÜR NEBULA NUR AUF EINEM WEG HER! SPEISEN SIE V+ NICHT MEHRFACH EIN.

Legende



Verbindung erforderlich für MASSE / DATEN.



Verbindung bei Bedarf möglich für TAKT.



Verbindung erforderlich für V+.




Repräsentiert einzelne oder mehrere LED-Ketten, bis zur maximalen Anzahl an LEDs je Anschluss.




Repräsentiert die Anzahl an Spannungsversorgungen, welche die verwendeten LEDs benötigen. Dabei kann eine einzelne Versorgung für mehrere LED-Ketten, aber auch mehrere Versorgungen je LEDs und Anschluss gemeint sein. Bitte achten Sie auf die richtige Spannungsversorgung sowie Richtung Ihrer LEDs laut deren Handbuch!


Verbinden von mehreren LED-Ketten

Wenn die Spannungsversorgung z.B. mehrere LED-Ketten versorgen kann:




Wenn die Spannungsversorgung z.B. nur eine LED-Kette versorgen kann:

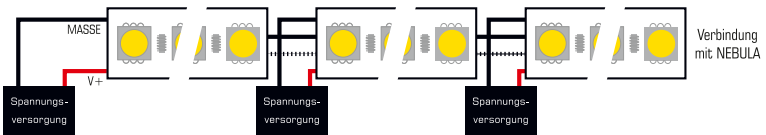

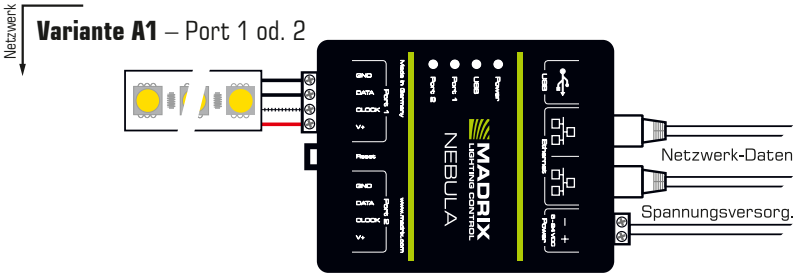


Beschreibung: Die Spannungsversorgung wird einmal bereitgestellt und an NEBULA mit max. 12 A angeschlossen. Sie versorgt auch gleichzeitig die LEDs. Diese sind entweder an Anschluss 1 od. 2 angeschlossen über MASSE, DATEN, TAKT bei Bedarf und V+ mit max. 6 A Last am Anschluss.

Variante B1 – Port 1 od. 2

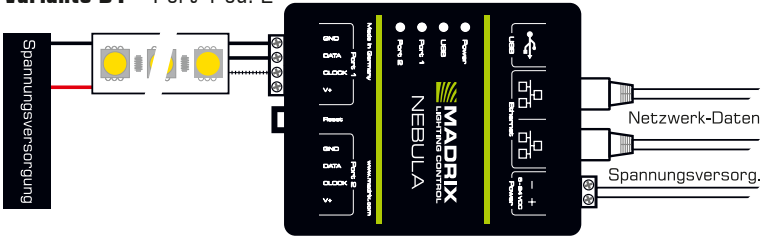


Beschreibung: Die Spannungsversorgung wird separat für NEBULA und die LEDs (wie benötigt) bereitgestellt. Die LEDs sind entweder an Anschluss 1 oder 2 angeschlossen über MASSE, DATEN und TAKT bei Bedarf, aber nicht über V+!

Variante C1 – Port 1 od. 2

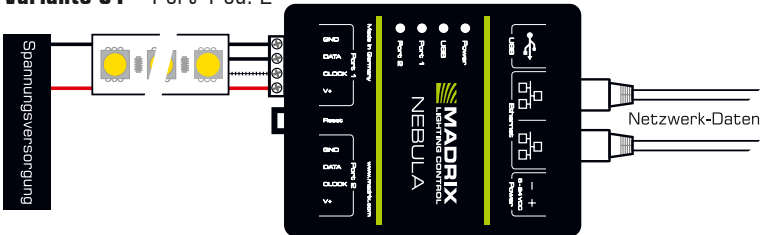


Beschreibung: Die Spannungsversorgung wird einmal bereitgestellt und an die LEDs (wie benötigt) angeschlossen. Die LEDs sind mit NEBULA über MASSE, DATEN, TAKT bei Bedarf und V+ verbunden. Durch erwartbaren Spannungsabfall über die Länge der LED-Kette hinweg für LEDs mit > 9 V geeignet.
Alternative: Positionieren Sie die Spannungsversorgung zw. LEDs und NEBULA für LEDs mit 5 V.

Variante A2

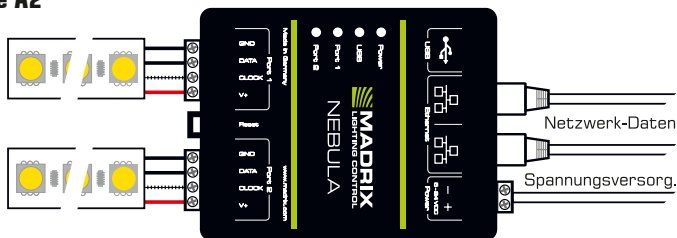


Beschreibung: Die Spannungsversorgung wird einmal bereitgestellt und an NEBULA mit max. 12 A angeschlossen. Sie versorgt auch gleichzeitig die LEDs. Diese sind an beiden Anschlüssen verbunden über MASSE, DATEN, TAKT bei Bedarf und V+ mit max. 6 A Last je Anschluss.

Variante B2

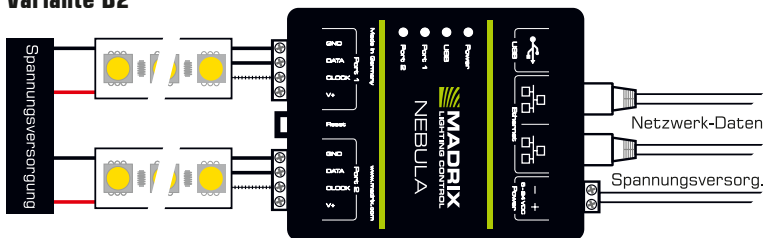


Beschreibung: Die Spannungsversorgung wird separat für NEBULA und die LEDs (wie benötigt) bereitgestellt. LEDs sind an beiden Anschlüssen verbunden über MASSE, DATEN und TAKT bei Bedarf, aber nicht über V+!

Variante C2

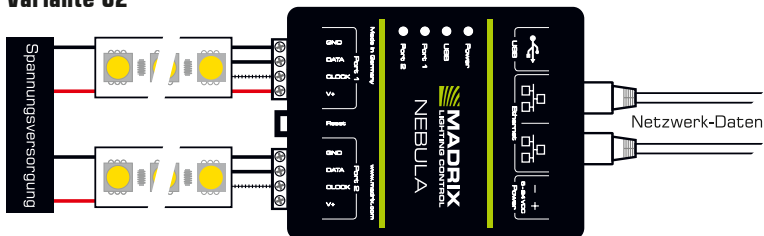


Beschreibung: Die Spannungsvers. wird für alle LEDs (wie benötigt) bereitgestellt. LEDs sind an beiden Anschlüssen verbunden über MASSE, DATEN und TAKT bei Bedarf, aber nur einmal über V+! Durch erwartbaren Spannungsabfall über die Länge der LED-Kette hinweg für LEDs mit > 9 V geeignet.
Alternative: Positionieren Sie die Spannungsversorgung zw. LEDs und NEBULA für LEDs mit 5 V.

Variante D

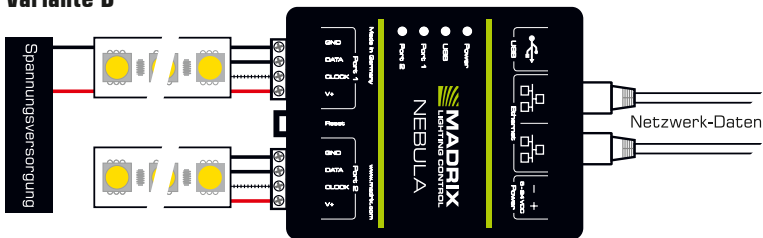


Beschreibung: Die Spannungsvers. wird einmal bereitgestellt und nur an die ersten LEDs (wie benötigt) angeschlossen! LEDs sind an beiden Anschlüssen über MASSE, DATEN, TAKT bei Bedarf und V+ (max. 6 A) verbunden. Durch d. erw. Spannungsabfall ist d. Var. f. LEDs mit > 9 V geeignet.
Alternative: Positionieren Sie die Spannungsversorgung zw. LEDs und NEBULA für LEDs mit 5 V.

Variante X1 – Port 1 od. 2

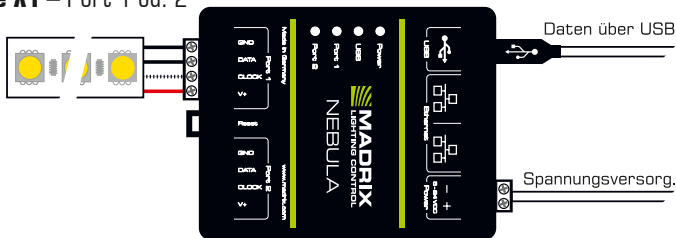


Beschreibung: Die Spannungsversorgung wird einmal bereitgestellt und an NEBULA mit max. 12 A angeschlossen. Sie versorgt auch gleichzeitig die LEDs. Diese sind entweder an Anschluss 1 od. 2 angeschlossen über MASSE, DATEN, TAKT bei Bedarf und V+ mit max. 6 A Last am Anschluss.

Variante Y1 – Port 1 od. 2

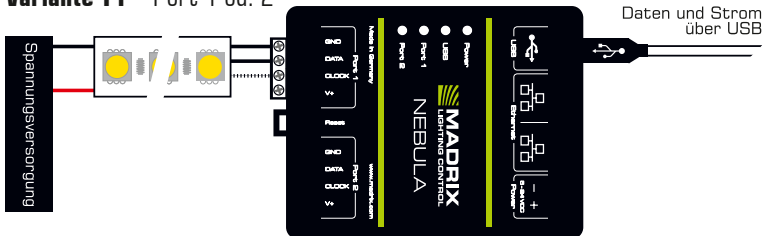


Beschreibung: Die Spannungsversorgung wird separat für NEBULA (über USB) und die LEDs (wie benötigt) bereitgestellt. Die LEDs sind mit NEBULA verbunden über MASSE, DATEN und TAKT bei Bedarf, aber nicht über V+!

Variante X2

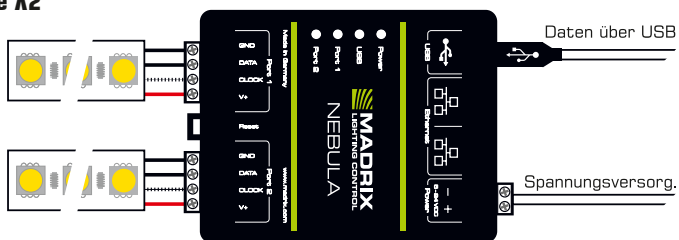


Beschreibung: Die Spannungsversorgung wird einmal bereitgestellt und an NEBULA mit max. 12 A angeschlossen. Sie versorgt auch gleichzeitig die LEDs. Diese sind an beiden Anschlüssen verbunden über MASSE, DATEN, TAKT bei Bedarf und V+ mit max. 6 A Last je Anschluss.

Variante Y2

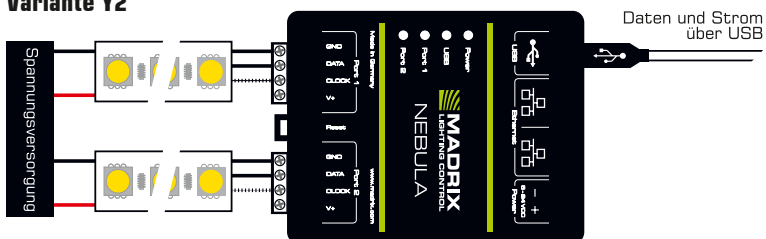

Beschreibung: Die Spannungsversorgung wird separat für NEBULA (über USB) und die LEDs (wie benötigt) bereitgestellt. LEDs sind an beiden Anschlüssen verbunden über MASSE, DATEN und TAKT bei Bedarf, aber nicht über V+!

Variante Z

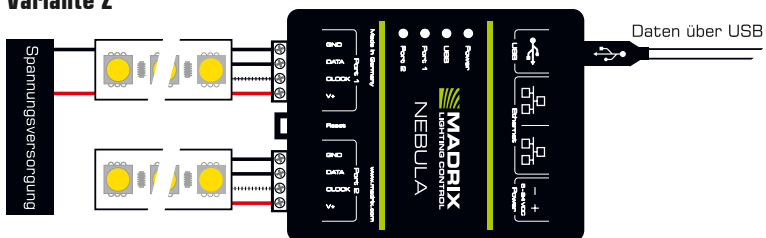

Beschreibung: Die Spannungsvers. wird einmal bereitgestellt und nur an die ersten LEDs (wie benötigt) angeschlossen! LEDs sind an beiden Anschlüssen über MASSE, DATEN, TAKT bei Bedarf und V+ (max. 6 A) verbunden. Durch d. erw. Spannungsabfall ist d. Var. f. LEDs mit > 9 V geeignet.
Alternative: Positionieren Sie die Spannungsversorgung zw. LEDs und NEBULA für LEDs mit 5 V.

3. Geräte-Konfiguration

- Schritt 1) Verbinden Sie NEBULA und den PC mit demselben Netzwerk.
- Schritt 2) Stellen Sie die richtigen Netzwerkeinstellungen im Betriebssystem ein. (Empfohlen: IP-Adresse 10.0.0.1 / Subnetzmaske 255.0.0.0)
- Schritt 3) Öffnen Sie einen Webbrowser und geben Sie die IP-Adresse des NEBULA ein. (Diese finden Sie auf der NEBULA-Geräteseite.)
- Schritt 4) Wählen Sie in der erscheinenden Web-Konfiguration die verwendeten LEDs für "Port 1" und "Port 2" unter "Output Settings" → "Output Protocol". Das Ausgabeprotokoll kann je Port getrennt eingestellt werden. Bestätigen Sie mit "Set".
- Schritt 5) Ändern Sie weitere Einstellungen je nach Bedarf.

Hinweis: Um MADRIX® NEBULA vollständig in Betrieb zu nehmen, muss das richtige Ausgabeprotokoll je nach verbundenen LEDs eingestellt werden.

Netzwerkreihenschaltung ("Daisy Chain")

NEBULA bietet 2 gleichgestellte Netzwerkanschlüsse, die beide für das Empfangen und Senden von Daten geeignet sind. Sie ermöglichen auch die Reihenschaltung ohne weiteren Netzwerk-Switch.

Wir empfehlen max. bis zu 40 Geräte hintereinander, bei Nutzung von Art-Net im Unicast-Modus oder Streaming ACN im Multicast-Modus mit einer max. Datenrate von 50 Hz / 20 ms und ohne weitere Geräte im Netzwerk zu haben. In der MADRIX®-Software empfehlen wir die Aktivierung des ArtSync-Synchronisationsmodus für exzellente Bildqualität (siehe S. 17).

Aktualisieren der Firmware

Es wird empfohlen, immer die neueste Firmware zu verwenden. Das Aktualisieren kann auf mehreren Wegen erfolgen, wie zum Beispiel:

- Schritt 1) Verbinden Sie MADRIX® NEBULA mit Ihrem Computer über USB.
- Schritt 2) Starten Sie die MADRIX®-Software.
- Schritt 3) Öffnen Sie in MADRIX® das Menü "Werkzeuge..." → "MADRIX-Gerätekonfiguration...". Klicken Sie auf das Lupen-Symbol, um nach Geräten zu suchen. Wählen Sie das Gerät in der Liste aus, klicken Sie auf "Firmware" und folgen Sie den weiteren Anweisungen.

Anzeige der Status-LEDs

STATUS	STATUS-LED POWER (SPANNUNGSVERSORGUNG)
<i>Ausgeschaltet</i>	Keine Spannungsversorgung. → Das Gerät hat keinen Strom.
Permanent grün	Spannungsversorgung liegt an. → Das Gerät hat Strom.
Grün blinkend	Bootloader aktiviert. → Zurücksetzen / Firmware einspielen.

STATUS	STATUS-LED USB
<i>Ausgeschaltet</i>	USB nicht angeschlossen.
Rot + grün blinkend	Kommunikation über USB. → Daten werden gesendet. Der Anschluss arbeitet.
Überblenden zw. rot + grün	Angeschlossen an USB; Treiber korrekt installiert. → Kein Datenverkehr über USB.
Orange	Angeschlossen an USB; Treiber nicht installiert. → Software/Treiber neu installieren; USB-Anschl. wechseln.

STATUS	STATUS-LED PORT 1	STATUS-LED PORT 2
<i>Ausgeschaltet</i>	Kein Datenverkehr.	Kein Datenverkehr.
Grün blinkend	Ausgabe von Daten. → Der Anschluss arbeitet.	Ausgabe von Daten. → Der Anschluss arbeitet.


STATUS	STATUS-LEDS ETHERNET (NETZWERKANSCHLÜSSE)
Grün aus	10 MBit/s angeschlossen.
Grün an	100 MBit/s angeschlossen.
Orange an	Netzwerk angeschlossen.
Orange blinkend	Datenverkehr über Netzwerk. → Der Anschluss arbeitet.

Zurücksetzen auf Werkseinstellungen

- Führen Sie folgende Schritte für ein Zurücksetzen auf Werkseinstellungen aus:
- Schritt 1) Trennen Sie alle Anschlüsse vom Gerät (Spannung, Daten, LEDs).
 - Schritt 2) Drücken Sie die "Reset"-Taste (zwischen Port 1 und Port 2).
 - Schritt 3) Halten Sie weiterhin die "Reset"-Taste gedrückt und stellen Sie die Spannungsversorgung über "Power" oder USB wieder her.
 - Schritt 4) Halten Sie die "Reset"-Taste gedrückt und warten Sie bis alle Status-LEDs des Gerätes schnell blinken oder warten Sie 10 Sekunden.

Hinweis: Wiederholen Sie die Schritte, sollte der Vorgang fehlschlagen.

Montage auf Hutschienen

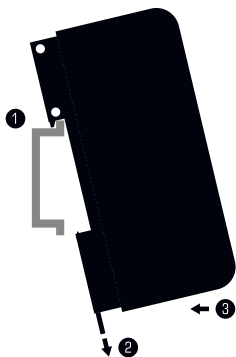


Montage (Links abgebildet)

- Schritt 1) Hängen Sie das Gerät schräg auf die obere Kante der Hutschiene ein.
- Schritt 2) Lösen Sie die Entriegelung.
- Schritt 3) Drücken Sie das Gerät auf die Schiene und lassen Sie die Entriegelung einrasten.

Demontage (Rechts abgebildet)

- Schritt 1) Lösen Sie die Entriegelung.
- Schritt 2) Ziehen Sie den unteren Teil des Gerätes schräg von der Schiene.
- Schritt 3) Heben Sie das Gerät von der Hutschiene.

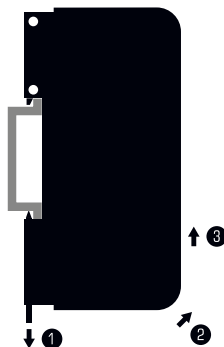

Nutzung der MADRIX®-Software

In Verbindung mit der MADRIX®-Software stehen 3 Betriebsmodi zur Verfügung:

- Senden über Art-Net
- Senden über Streaming ACN
- Senden über USB

In der MADRIX®-Software müssen zunächst die richtigen Treiber aktiviert sein:

- “Systemeinstellungen” > “Optionen...” > “USB-Geräte” für USB,
- “Systemeinstellungen” > “Optionen...” > “Netzwerkgeräte” für sACN,
- “Systemeinstellungen” > “Geräteverwaltung...” > “Art-Net” für Art-Net.

Danach können die Geräte konfiguriert und aktiviert werden:

- “Systemeinstellungen” > “Geräteverwaltung...” > “DMX-Geräte”.

Weitere Informationen finden Sie im Benutzerhandbuch von MADRIX® 5.

Aktualisierungen und weitere Informationen


Weitere Handbücher werden automatisch mit der MADRIX®-Software installiert und somit digital bereitgestellt. Mehr Informationen finden sich im **MADRIX® Help And Manual**, dem Handbuch zur Software. Es kann während des Arbeitens mit MADRIX® durch die Taste "F1" auf der Tastatur, über das Menü "Hilfe" → "Benutzerhandbuch..." oder online unter help.madrix.com aufgerufen werden.

Die neueste Version dieser Kurzanleitung sowie Software-Updates für die MADRIX®-Software, inkl. Treiber, aktueller Firmware und aktueller Versionen der Handbücher, sind im Internet erhältlich unter www.madrix.com

Hilfe und Support

Sollten weitere Fragen zur Handhabung oder technische Probleme auftauchen, konsultieren Sie bitte die weiteren Benutzerhandbücher, kontaktieren Sie Ihren Händler oder besuchen Sie die Internetseite www.madrix.com
Anfragen können auch direkt per Telefon oder per E-Mail erfolgen.

Konformitätserklärung für CE und RoHS

 **RoHS**
compliant

Das Gerät entspricht den Anforderungen der Richtlinie der Mitgliedsstaaten über die elektromagnetische Verträglichkeit (2014/30/EU), der Niederspannungsrichtlinie (LVD) (2014/35/EU) und der Richtlinie zur Beschränkung der Verwendung bestimmter gefährlicher Stoffe in Elektro- und Elektronikgeräten (2011/65/EU) (RoHS). Die Einhaltung mit diesen Richtlinien wurde auf Grundlage der folgenden Standards evaluiert: DIN EN 55011 (2009) + A1 (2010), DIN EN 55015 (2013), DIN EN 55024 (2010), DIN EN 61000-4-2 (2009), DIN EN 61000-4-3 (2006) + A1 (2008), DIN EN 61000-4-4 (2013), DIN EN 61000-4-6 (2014).

Häufig gestellte Fragen

Was bedeuten die leuchtenden LEDs auf dem Gerät?

Lesen Sie dazu bitte den Abschnitt "Anzeige der Status-LEDs" (siehe S. 14).

Wie kann ich die IP-Adresse des Gerätes ändern?

Nutzen Sie die eingebaute Konfiguration über einen Webbrowser (siehe S. 13).

Das Gerät kann über die aktuelle IP-Adresse nicht erreicht werden.

Setzen Sie das Gerät auf die Werkseinstellungen zurück (siehe S. 14).

Unterstützt das Gerät RDM?

Nein. RDM wird von MADRIX® NEBULA aktuell nicht unterstützt.

Ist es möglich, mehr als ein MADRIX® NEBULA zu verwenden?

Ja. Art-Net oder Streaming ACN wird für große Projekte mit mehreren Geräten empfohlen. Diese über geeignete Komponenten mit einem Switch (1 GBit/s) als Netzwerk verbinden oder die eingebaute Netzwerkreihenschaltung nutzen (siehe S. 13).

Wo kann ich den Modus zur Synchronisation ("ArtSync") einstellen?

Dieser kann in der MADRIX®-Software im Menü "Systemeinstellungen..." → "Geräteverwaltung..." → Reiter "Art-Net" → "ArtSync" aktiviert werden.

Wo finde ich die aktuellste Firmware für mein Gerät?

Die aktuellste MADRIX®-Software enthält die aktuellste Firmware (siehe S. 13).

Kann ich andere Zuspeler an Stelle von MADRIX® benutzen?

Ja. Wenn Sie das Gerät als reines Netzwerkgerät nutzen.

Brauche ich einen MADRIX® KEY zusätzlich zum MADRIX® NEBULA?

Ja, wenn Sie MADRIX® nutzen möchten. Die Softwarelizenz ist separat erhältlich.

Kann ich das MADRIX® NEBULA selber reparieren?

Nein. Versuchen Sie keine Reparaturarbeiten. Jeglicher Versuch führt zum Erlöschen der Garantie (siehe S. 3).

Was mache ich, wenn mein Gerät ausfällt?

Kontaktieren Sie bitte Ihren Händler bei Gerätedefekt.



www.madrix.com